
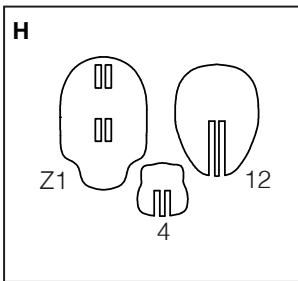
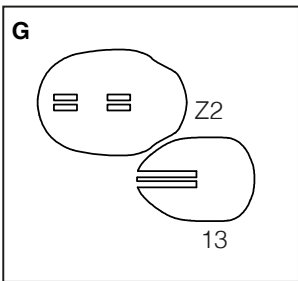
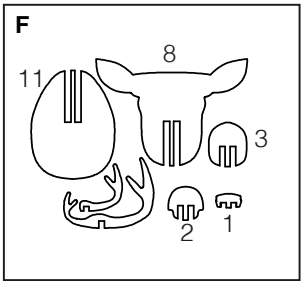
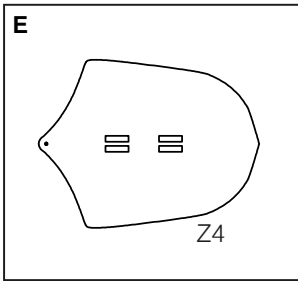
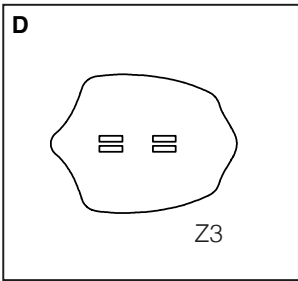
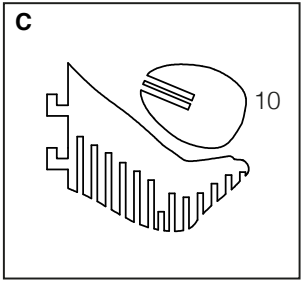
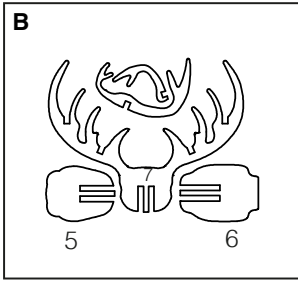


Inizio montaggio  
Assembly start

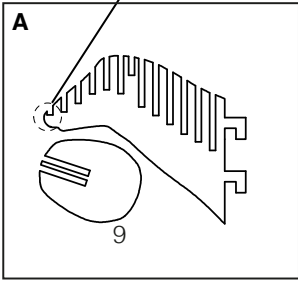

### **Procedura di montaggio:**

- Prendere i pezzi a pettine corrispondenti al collo della renna da pannelli (A e C).
- Iniziare a inserire i pezzi indicati con la numerazione progressiva (1,2,3,...) partendo dal muso della renna in concomitanza della scanalatura più piccola. (vedi indicazione -A-)
- I pezzi indicati dall' 1 al 13 hanno un inserimento dall'alto.
- Assicurare i blocchi Z1 e Z2 mediante bi-adesivo.
- Inserire nella parte posteriore del blocco centrale i pezzi Z1 e Z2, facendoli poi slittare verso l'alto per un migliore bloccaggio.
- Assicurare i blocchi Z3 e Z4 mediante bi-adesivo ed incastrarlo come chiusura della parte retrostante.
- Completare l'assemblaggio con gli elementi ad incastro delle corna.

### **Assembly instruction**

- *Take the comb shaped elements corresponding to the reindeer neck from panels (A and C).*
- *Start inserting the elements indicated with the progressive numbering (1,2,3, etc...) starting from the muzzle of the reindeer in conjunction with the smallest groove. (see indication -A-).*
- *The elements indicated from number 1 up to 13 have to be stuck on the upper part of big comb shaped support.*
- *Ensure elements Z1 and Z2 by using double side sealing tape.*
- *Insert elements Z1 and Z2 in the back side of the comb shaped support, then slide upward for a better fit.*
- *Ensure elements Z3 and Z4 by using double side sealing tape and insert the elements to close the backside.*
- *Complete the assembling by fitting the horn extentions to the main horns.*

**ZELO21.COM**

---

ZELO21 SRL - VIA PETRARCA 1 - 22070 ROVELLO PORRO (CO) - ITALY - C.F./P.IVA 03777080130  
REA CO-332478 - TEL. +39 0297388797 - FAX +39 0297388798 - INFO@ZELO21.COM - ZELO21.COM

Copyright ©Zelo21 srl. All Rights Reserved.